



The Innovator in Insulation Equipment



OWNERS MANUAL

MODEL #325



65 YEARS OF QUALITY AND SERVICE

KRENDL MACHINE COMPANY • 1201 SPENCERVILLE RD
DELPHOS, OHIO 45833 • TELEPHONE 800-459-2069 • FAX 419-695-9301
E - MAIL: krendl@krendlmachine.com • WEB SITE: www.krendlmachine.com

CONGRATULATIONS ON YOUR PURCHASE OF KRENDL EQUIPMENT

**MODEL #325
OWNER'S MANUAL**

FOR ASSURED SAFETY AND CONFIDENCE, PLEASE READ THIS MANUAL CAREFULLY BEFORE INSTALLING AND OPERATING YOUR MACHINE.

**E-MAIL ADDRESS IS: krendl@krendlmachine.com
WEB SITE IS: www.krendlmachine.com**

Table of Contents

	PAGE
INTRODUCTION.....	1
GENERAL SAFETY INFORMATION.....	2-3
DECALS.....	4-5
WARRANTY.....	6
RETURNED GOODS PROCEDURE and SPECIFICATIONS	7
BASIC COMPONENTS.....	8
OPERATING INSTRUCTIONS.....	9-11
TROUBLESHOOTING.....	12
ELECTRICAL.....	13-14
LADDER DIAGRAM.....	15
PARTS LIST.....	16-19
GLOSSARY.....	20
SERVICE RECORD.....	21

INTRODUCTION

Thank you for purchasing a **KRENDL INSULATION MOVING MACHINE**. With over sixty five years experience in manufacturing insulation moving equipment, we have designed and built your machine with the highest quality to provide years of reliable service.

This manual has been prepared to help you obtain the maximum efficiency and service from your Krendl equipment. The machine is designed to condition and apply insulation with the utmost in dependable performance. Our primary objective is to build equipment which will provide complete satisfaction so that you may confidently recommend Krendl to others.

We do not manufacture or sell insulation. Our interest lies only in the proper performance of the equipment we manufacture. We make no recommendations or guarantees concerning various insulations.

CAUTION:

This manual contains important information regarding the **safe** assembly and operation of your machine. We urge you to read it carefully and follow the instructions provided. If your questions are not answered in this manual, may we hear from you? We want you to be able to operate this unit safely and confidently.

UNPACKING: Store and unpack carton with correct side up. Unpack your machine **IMMEDIATELY** and check for damage in shipping. **Place any damage claim with delivering carrier, saving all packing materials for inspection.** Our warranty covers manufacturer's defects only. **DO NOT** return to shipper.

FILL IN AND RETAIN:

Krendl Machine Company
1201 Spencerville Rd
Delphos, Ohio 45833 U.S.A.

Telephone: 800-459-2069
Fax: 419-695-9301
E-mail: krendl@krendlmachine.com
Web Site: www.krendlmachine.com

For your protection in the event of theft or loss, please fill in the information requested for your own records. This information will be needed for in-warranty repairs. You may also want to attach a copy of your invoice.

Machine model number _____ Blower motor manufacturer _____

Serial number _____ Gear motor manufacturer _____

Blower serial number _____ Gear motor serial number _____

Supplier _____ Date of purchase _____

The model and machine serial numbers are located on the hopper of the machine unit. The blower and gearmotor serial numbers are located on the motor housing of each unit.

GENERAL SAFETY INFORMATION

 **Important:** Read **all** instructions **before** operating this unit. This equipment can be potentially dangerous and must be used in strict accordance with instructions.

 **Disclaimer Notice:** The manufacturer will not be legally responsible for any injury or damage resulting from the improper use of this equipment or the failure to follow instructions.

Unpacking

Handle cartons with care to avoid damage from dropping or bumping. Store and unpack cartons with the correct side up. Completely remove machine from the packaging and from any shipping pallet or skid to which it might be attached. In addition, completely remove all shipping materials from **inside** the machine including wheel package, manual, ect....



General Safety

1. Read this manual carefully and become familiar with your machine unit. Know its applications, limitations, and any hazards involved.
2. This machine was designed and manufactured for specific applications. Do not attempt to modify the unit or use it for any application it was not designed for. If you have any questions about your intended use or the machines suitability, ask your dealer/distributor or consult the factory. The manufacturers' could not possibly anticipate every circumstance that might involve a hazard. For that reason, warnings in the manual and warning tags or decals affixed to the unit, are **not** all-inclusive. If you intend to handle, operate, or service the unit by a procedure or method not specifically recommended by the manufacturer, first make sure that such a procedure or method will not render this equipment unsafe or pose a threat to you and others.



Electrical Safety

- The **National Electric Code** (NEC) in the United States and many international electrical codes require frame and external electrically conductive parts of this machine to be properly connected to an approved earth ground. Local electrical codes may also require proper grounding of machine. Consult with local electricians for grounding requirements in your area.
- Never handle any kind of electrical cord or device while standing in water, while barefoot or while hands or feet are wet. Dangerous electrical shock will result.
- Use a ground fault circuit interrupter (GFCI) in damp or highly conductive areas. (metal decking or steel work)
- Reference NFPA 79, 70E, or OSHA safe work practices when performing energized work procedures.



Safety/Caution

- **Be Safe** - Keep away from moving parts.
- **Be Safe** - Make sure all guards and hopper bar are in proper place **before** operating machine. Guards and safety devices/switches should not be removed, modified or by-passed. Hands should **never** pass below hopper bar.
- **Be Safe** - Do not remove motors or lift hopper when unit is connected to power supply.
- **Be Safe** - Make sure machine is properly grounded. Protect all electrical supply cords from sharp objects, moisture, and other potentially hazardous materials. Keep power cords in good repair. Electrical service must be performed by a qualified electrician.
- **Be Safe** - Disconnect power supply **before** inspecting or adjusting unit.
- **Be Safe** - Consult a qualified technician to answer questions **before** attempting to operate, or injury may result.
- **Be Safe** - Do not operate machine alone.
- **Be Safe** - Do not leave machine unattended and energized.
- **Be Safe** - Turn machine off and disconnect electricity before clearing and feeding jam or attempting to remove any object dropped in the hopper.
- **Be Safe** - Keep hands, loose clothing, jewelry and hair away from agitators, gears, chains and other moving parts.
- **Be Safe** - Use proper lifting when moving insulation and loading machine.
- **Be Safe** - Keep work area clear of debris.
- **Be Safe** - Wear proper safety equipment, including protective gear, such as respirators, eye and ear protection.
- **Be Safe** - Violation of the Owner's Manual or safety precautions may void warranty.



Make Sure!

- Hopper is empty of foreign objects **before** starting.
- Adequate electrical power is supplied or damage to unit will result.
- Blower filter is kept clean and in place when blower is on.
- Machine is turned off **immediately** if hose is plugged, or blower will overheat.
- Machine must be on **before** adding insulation.
- Blower must be on, when agitators are running, or machine will bind.
- Agitator motor is not run with hopper empty for more than a few minutes, or damage to seals will result.
- Sprockets, chains, belts and pulleys are correctly **aligned** and **tensioned**.
- Pieces of bag are **not** left in the machine as this can bind and stall your machine.
- This machine should only be used with good quality insulations that are dry, undamaged and that meet a certain industry specification or quality standards.

DECALS

CAUTION

FAILURE TO KEEP FILTER CLEAN
MAY RESULT IN DAMAGE TO BLOWER

PRECAUCIÓN

LA FALLA EN CONSERVAR EL FILTRO
LIMPIO PUEDE RESULTAR EN DAÑO
AL SOPLADOR.

KMCS-001

Keeping the filter clean will result in longer blower life and better performances.

DANGER

KEEP AWAY FROM
MOVING PARTS

PELIGRO

MANTÉNGAS EALEJADO
DE LAS PARTES EN
MOVIMIENTO

KMCS-001

Rotating parts can be dangerous! You can snag clothes, hair, hands, etc. This can cause serious injury or death.

**ROTATION
ROTACIÓN**

KMCS-100

Rotating parts move in this direction.

**INSPECTED
BY**

Indicates which employee inspected the equipment and on what date.

ALL FIBER MACHINES

NOTE: THIS EQUIPMENT TO BE USED IN THE APPLICATION OF CELLULOSE, FIBERGLASS, AND ROCKWOOL INSULATION.

IMPORTANT: PLEASE READ THE MANUAL AND ALL INSTRUCTIONS BEFORE OPERATING THIS UNIT. THIS EQUIPMENT CAN BE POTENTIALLY DANGEROUS AND MUST BE USED IN STRICT ACCORDANCE WITH INSTRUCTIONS. IF NO MANUAL IS PROVIDED A FREE DOWNLOAD IS AVAILABLE AT WWW.KRENDELMACHINE.COM OR BY CONTACTING KRENDEL MACHINE AT 419-692-3060.

DISCLAIMER NOTICE: THE MANUFACTURER WILL NOT BE LEGALLY RESPONSIBLE FOR ANY INJURY OR DAMAGE RESULTING FROM THE IMPROPER USE OF THIS EQUIPMENT OR THE FAILURE TO FOLLOW INSTRUCTIONS. (REFER TO ADDITIONAL INSTRUCTIONS PROVIDED.)

WARNING: NEVER HANDLE ANY KIND OF ELECTRICAL CORD OR DEVICE WHILE STANDING IN WATER, WHILE BAREFOOT OR WHILE HANDS AND OR FEET ARE WET. DO NOT USE ELECTRICAL DEVICES IN INCLEMENT WEATHER. DANGEROUS ELECTRICAL SHOCK OR DEATH WILL RESULT.

CAUTION-BE SAFE

- KEEP AWAY FROM MOVING PARTS.
- MAKE SURE ALL GUARDS AND HOPPER BARS ARE IN PROPER PLACE BEFORE OPERATING MACHINE. HANDS SHOULD NEVER PASS BELOW HOPPER BARS.
- MAKE SURE BLOWER MOTOR AND AGITATOR MOTOR SWITCHES ARE IN OFF POSITION BEFORE CONNECTING THE POWER SUPPLY TO THE MACHINE.
- MAKE SURE MACHINE IS PROPERLY GROUNDING. PROTECT POWER CABLE FROM SHARP OBJECTS, MOISTURE, AND OTHER POTENTIALLY HAZARDOUS MATERIALS. KEEP POWER CORDS IN GOOD REPAIR. ELECTRICAL SERVICE MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN.
- DISCONNECT POWER SUPPLY BEFORE INSPECTION OR ADJUSTMENT TO UNIT.
- DO NOT REMOVE BLOWER OR HOPPER WHEN UNIT IS CONNECTED TO POWER SUPPLY.
- CONSULT A QUALIFIED PERSON TO ANSWER QUESTIONS BEFORE ATTEMPTING TO OPERATE. OR INJURY MAY RESULT.

IMPORTANT- MAKE SURE

- ADEQUATE ELECTRICAL POWER IS SUPPLIED OR DAMAGE TO UNIT WILL RESULT.
- BLOWER FILTER IS KEPT CLEAN AND IN PLACE WHEN BLOWER IS ON.
- BLOWER IS ON WHILE AGITATOR IS RUNNING, OR MACHINE WILL PLUG.
- BLOWER IS TURNED OFF IMMEDIATELY IF HOSE IS PLUGGED, OR BLOWER WILL OVERHEAT.
- AGITATOR MOTOR IS ON BEFORE ADDING FIBER.
- AGITATOR MOTOR IS NOT RUN WITH HOPPER EMPTY FOR MORE THAN A FEW MINUTES, OR DAMAGE TO SEALS WILL RESULT.
- BELTS OR CHAINS ARE CORRECTLY ADJUSTED AND TENSIONED.

TODAS LAS MÁQUINAS DE FIBRA

NOTA: ESTE EQUIPO SERÁ USADO EN LA APLICACIÓN DE AISLAMENTOS DE CELULOSA, FIBRA DE VIDRIO Y LANA DE ROCA.

IMPORTANTE: POR FAVOR LEA EL MANUAL Y LAS INSTRUCCIONES ANTES DE OPERAR ESTA UNIDAD. ESTE EQUIPO PUEDE SER POTENCIALMENTE PELIGROSO Y SE DEBERÁ USAR ESTRUCTIVAMENTE DE ACUERDO CON LAS INSTRUCCIONES. SI NO SE PROPORCIONA UN MANUAL, SE PUEDE DESCARGAR GRATUITAMENTE DE WWW.KRENDELMACHINE.COM O CONTACTANDO A LA EMPRESA KRENDEL MACHINE 419-692-3060.

AVISO DE SALVAGUARDIA LEGAL: EL FABRICANTE NO SERÁ LEGALMENTE RESPONSABLE POR NINGÚN PERJUICIO O DAÑO RESULTANTE POR EL USO INAPROPIADO DE ESTE EQUIPO O LA INOBSERVANCIA DE LAS INSTRUCCIONES. (CONSULTE A LAS INSTRUCCIONES ADICIONALES SUMINISTRADAS.)

ADVERTENCIA: NUNCA MANIPULE NINGÚN TIPO DE DISPOSITIVO O CABLE ELÉCTRICO MIENTRAS ESTÁ DE PIE, SOBRE AGUA, MIENTRAS ESTÁ DESCALZO O CON LAS MANOS O PIES HÚMEDOS. NO USE DISPOSITIVOS ELÉCTRICOS EN CLIMAS INCLEMENTES. PUEDE TRAER COMO RESULTADO O CHOQUES ELÉCTRICOS PELIGROSOS O LA MUERTE.

PRECAUCIÓN-NO CORRA RIEGOS

- MANTÉNGASE ALEJADO DE LAS PARTES EN MOVIMIENTO.
- ASEGÚRESE DE QUE TODAS LAS PROTECCIONES Y LAS BARRAS DE LA TOLVA ESTÉN EN EL LUGAR CORRECTO ANTES DE OPERAR LA MÁQUINA. LAS MANOS JAMÁS DEBEN PASAR POR DEBAJO DE LAS BARRAS DE LA TOLVA.
- ASEGÚRESE DE QUE LOS INTERRUPTORES DEL MOTOR DEL SOPLADOR Y DEL AGITADOR ESTÉN EN LA POSICIÓN OFF ANTES DE CONECTAR EL SUMINISTRO DE ENERGÍA A LA MÁQUINA.
- ASEGÚRESE DE QUE LA MÁQUINA ESTE PUESTA A TIERRA ADECUADAMENTE. PROTEJA EL CABLE DE ENERGÍA DE OBJETOS CORTANTES, HÚMEDAD Y OTROS MATERIALES POTENCIALMENTE PELIGROSOS. CONSERVE LOS CABLES DE ENERGÍA EN BUENA FORMA. EL MANTENIMIENTO ELÉCTRICO DEBE ESTAR A CARGO DE UN ELECTRICISTA CALIFICADO.
- DESCONECTE EL SUMINISTRO DE ENERGÍA ANTES DE INSPECCIÓN O AJUSTE DE LA UNIDAD.
- NO OPERE EL SOPLADOR O LA TOLVA CUANDO LA UNIDAD ESTÁ CONECTADA AL SUMINISTRO DE ENERGÍA.
- CONSULTE SUS DUDAS A UNA PERSONA CALIFICADA ANTES DE INTENTAR OPERAR LA MÁQUINA O ALGUIEN PUEDE LESIONARSE.

IMPORTANTE-ASEGÚRESE DE

- QUE SE SUMINISTRE LA ENERGÍA ELÉCTRICA ADECUADA O SE DAÑARÁ EL EQUIPO.
- QUE EL FILTRO DEL SOPLADOR SE MANTENGA LIMPIO Y EN SU LUGAR CUANDO EL SOPLADOR ESTE EN FUNCIONAMIENTO.
- QUE EL SOPLADOR FUNCIONE MIENTRAS EL AGITADOR ESTE EN MARCHA, O LA MÁQUINA SE SOPORARÁ.
- QUE EL SOPLADOR SE DETIENGA INMEDIATAMENTE SI LA MANGUERA SE TAPÓ O EL SOPLADOR SE RECALENTARÁ.
- QUE EL MOTOR DEL AGITADOR ESTE FUNCIONANDO ANTES DE AGRGAR FIBRA.
- QUE EL MOTOR DEL AGITADOR NO FUNCIONE CON LA TOLVA VACÍA MÁS QUE UNOS POCOS MINUTOS O SE DAÑARÁN LOS SELLOS.
- QUE LAS CORREAS O CADENAS ESTÉN CORRECTAMENTE ALINEADAS Y TENSIONADAS.

General safety information intended to reduce the risk of serious injury or death.

Krendl Machine Co.
1201 Spencerville Ave.
Delphos, OH 45833

**TYPE 1
Indoor Use**

Issue No. XXXXXXXX
E314782

Indicates that the electrical box on the machine is in compliance with UL codes.

KMC-01234

Part number for identification and tracking.

The Innovator in Insulation Equipment

Serial No: XXX

ENGINEERED & BUILT BY
KRENDEL MACHINE COMPANY
1201 SPENCERVILLE AVE., DELPHOS, OH 45833 PH. 419.692.3060 • 800.459.2069
EMAIL: krendl@krendlmachine.com

Model 325

KMC-100-01


Manufacturer information is provided here along with machine model and serial number.

MADE IN

U. S. A.

KMC-100

Made in the U.S.A.

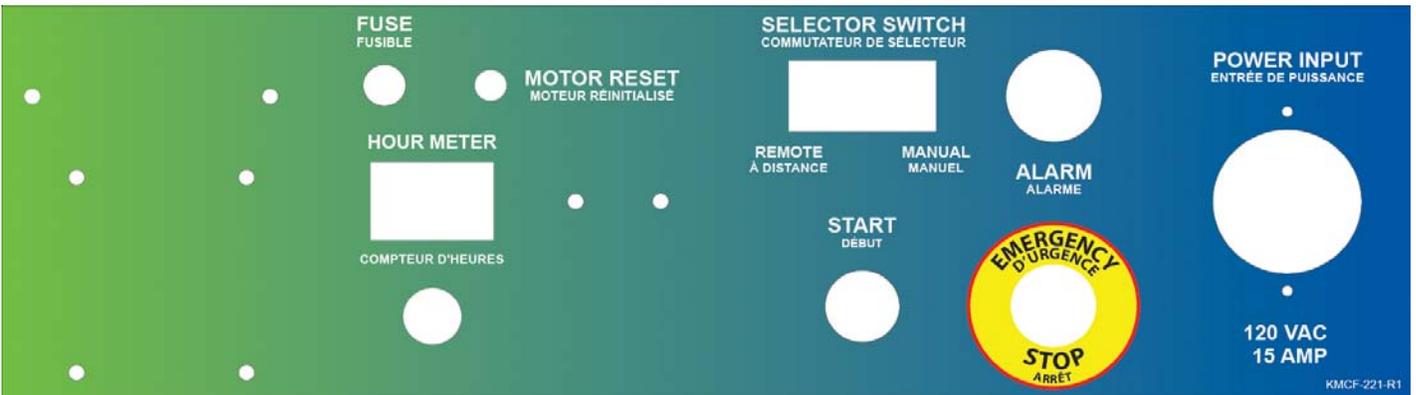

Indicates the controls that start, stop, and run the machine.

WARRANTY

Krendl Machine Company (Company) warrants to each original purchaser (Buyer) of its machines that such products will be free of manufacturing defects for a period of 2 years from the date of shipment to the Buyer. (This does not include accessories, pumps, blowers, wall scrubbers, etc.)

No warranty is made with respect to:

1. Components or accessories manufactured and warranted by others. Warranties for purchased component parts as supplied from vendor such as engine, electric motor, blower, gearbox, transmission, etc., if furnished by the manufacturer of the component, are on file at the Company's main office and copies will be furnished at request of Buyer. Component(s), shipping costs prepaid, shall be sent to Company who in turn shall forward to vendor for evaluation and warranty determination.
2. Any defect caused by repair, alteration and/or adjustment performed by Buyer or customer/ vendor of Buyer without the express written authorization of the Company.
3. The labor costs of replacing parts by parties other than the Company.
4. Any machine that has not been operated and/or maintained in accordance with normal industry practice and the written recommendations of the Company. (e.g. machine operated with an improperly sized, worn or damaged hose, improper or inattention to preventative maintenance, etc.)
5. The product has been subjected to misuse, negligence or accident or results of any application or use of the blowing equipment not in accordance with the Company recommendations.

This limited warranty does not cover the free replacement of component parts that become inoperative due to wear and usage and need to be replaced on a regular basis, including but not limited to: airlock seal(s), agitator(s), shredder(s), auger(s), fuse(s), switch(es), clutch(es), hose(s), shaft seal(s), chain(s), belt(s), sprocket(s), pulley(s), bearing(s), cable(s), battery(ies), filter(s), fan(s), etc.

The Company's obligation under this warranty is limited to repairing or replacing (at Company option) any part that is determined by the Company to be suffering from a manufacturing defect. The Company (at Company option) will provide any required parts and labor to the Buyer. If the equipment or parts must be returned to the Company for repair, all transportation costs shall be the Buyer's responsibility.

THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER GUARANTEES AND / OR WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTY OF MERCHANTABILITY. NO WARRANTY, EXPRESS OR IMPLIED, OTHER THAN THE AFORESAID WARRANTY IS MADE OR AUTHORIZED BY COMPANY. COMPANY SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES TO PROPERTY OR INJURY TO ANY PERSON OR COSTS ASSOCIATED WITH LOSS OF PRODUCTION RESULTING IN LOSS OF REVENUE, PROFITS OR LOSS OF EQUIPMENT THROUGH THE USE OF THIS EQUIPMENT.

Note: Special job circumstances incurring costs for specialized repair and next day delivery of parts will not be reimbursed by the manufacturer unless authorized by factory.

RETURNED GOODS PROCEDURE

IF MACHINE WAS NOT PURCHASED DIRECTLY FROM KRENDL MACHINE COMPANY, CONTACT YOUR SUPPLIER / DISTRIBUTOR.

When returning products to Krendl for repair, first obtain a return goods authorization, at which time you will be given shipping instructions. The product must be shipped **PREPAID**:

Krendl Machine Company
1201 Spencerville Rd
Delphos, Ohio 45833 U.S.A.

Telephone: 800-459-2069
Fax: 419-695-9301
E-mail: krendl@krendlmachine.com
Web Site: www.krendlmachine.com

Once the unit is received, it will be inspected. In-warranty units will be repaired and returned immediately. An estimate of repair charges will be provided for out-of-warranty units.

SPECIFICATIONS

MODEL#:	325
MACHINE:	8" Diameter x 8" Length airlock (20.3 cm Diameter x 20.3 cm Length airlock) In line helical gear motor (driving the machine)
HEIGHT:	49 1/2" (126 cm) 56" (142 cm) (Extended)
WIDTH (DEPTH):	29 1/2" (75 cm)
LENGTH:	28 1/2" (72 cm)
WEIGHT:	179 pounds (81 kg) 189 pounds (86 kg) (Extended)
ELECTRICAL:	120VAC, 15 amp, single input
BLOWER VOLUME:	104 CFM
BLOWER PRESSURE:	2.0 PSI maximum
HOSE OUTPUT:	2.5" diameter (6.3 cm diameter)

MAXIMUM FEED RATES:

CELLULOSE: 900 lbs./hr.



WARNING: Recommended hose size, type and length must be used to achieve maximum results. Krendl cannot guarantee performance of the machine if hoses are undersized, worn, damaged, or hoses other than those we recommend are used.

BEFORE YOU RUN THIS MACHINE...PLEASE READ THE REST OF THIS MANUAL!!

BASIC COMPONENTS

This is a view of the basic components of your #325 machine. It shows the location of each item and gives the function of each. Use this as a guide throughout the manual.

- A) **BASE UNIT / HOPPER**—Hopper/base unit supports blower, gear motor and airlock.
- B) **AIRLOCK**—Traps air and insulation while providing a metered flow.
- C) **GEAR MOTOR**—Provides driving power of agitation system. Increases output power while decreasing speed of the agitators and airlock.
- D) **AGITATORS (2)**—Conditions insulation in the hopper.
- E) **MAIN CONTROL PANEL**—Connects with main power, allowing operation of unit at machine.
- F) **BLOWER**—(Not shown) Creates air pressure to blow insulation out of airlock.
- G) **HOPPER BAR**—Hinders operators from reaching agitators.

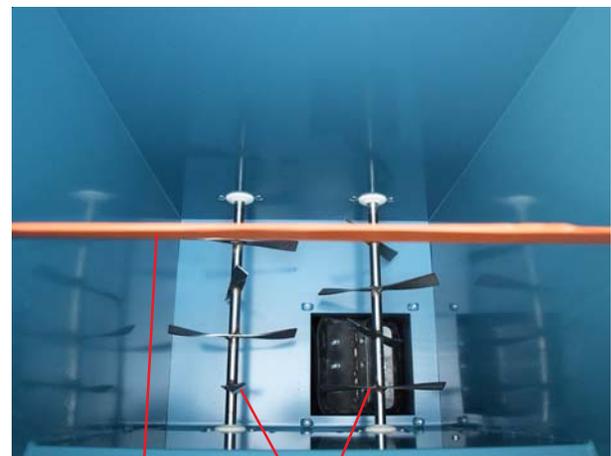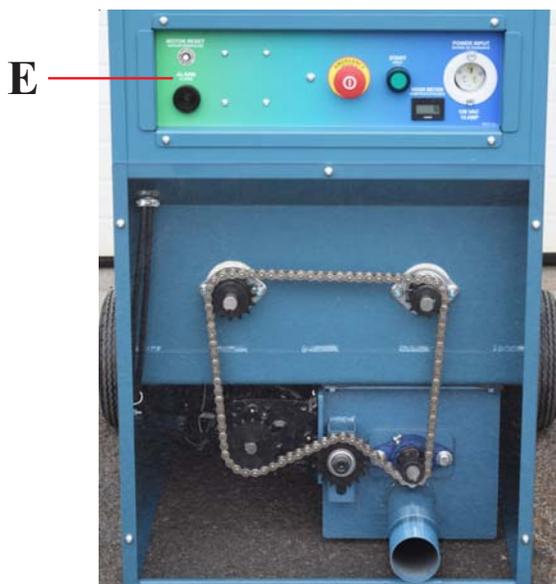

G D

OPERATING INSTRUCTIONS

1. Read all safety and operating instructions before operating this unit.
2. This unit comes ready for connection with hose, clamps, and power cord. (Not supplied)
3. This unit provides a direct hook-up to 2 1/2" I.D. hose. Slide hose on blower outlet and secure with a hose clamp to provide safe working conditions. All hose connections should have hose clamps to prevent air leakage and separation of hose.
4. This unit is supplied with power through a 120V Flush Mount Input Plug located on the Control Panel.
Note: When using extension cord, wire gauge size should not be less than 12-3 and not exceed 50' in length. (See Voltage Drop Chart Below.)

VOLTAGE DROP CHART									
Typical voltage drop values based on conductor size and one-way length* (60 C termination and insulation)									
25 FEET									
		12 AWG	10 AWG	8 AWG	6 AWG	4 AWG	3 AWG	2 AWG	1 AWG
AMPERES	20	1.98	1.24	0.78	0.49	0.31	0.25	0.19	0.15
	30		1.86	1.17	0.74	0.46	0.37	0.29	0.23
	40			1.56	0.98	0.62	0.49	0.39	0.31
	50				1.23	0.77	0.61	0.49	0.39
	60					0.93	0.74	0.58	0.46
50 FEET									
		12 AWG	10 AWG	8 AWG	6 AWG	4 AWG	3 AWG	2 AWG	1 AWG
AMPERES	20	3.95	2.49	1.56	0.98	0.62	0.49	0.39	0.31
	30		3.73	2.34	1.47	0.93	0.74	0.58	0.46
	40			3.13	1.97	1.24	0.98	0.78	0.62
	50				2.46	1.55	1.23	0.97	0.77
	60					1.85	1.47	1.17	0.92
75 FEET									
		12 AWG	10 AWG	8 AWG	6 AWG	4 AWG	3 AWG	2 AWG	1 AWG
AMPERES	20	5.93	3.73	2.34	1.47	0.93	0.74	0.58	0.46
	30		5.59	3.52	2.21	1.39	1.1	0.87	0.69
	40			4.69	2.95	1.85	1.47	1.17	0.92
	50				3.69	2.32	1.84	1.46	1.16
	60					2.78	2.21	1.75	1.39
100 FEET									
		12 AWG	10 AWG	8 AWG	6 AWG	4 AWG	3 AWG	2 AWG	1 AWG
AMPERES	20	7.90	4.97	3.13	1.97	1.24	0.98	0.78	0.62
	30		7.46	4.69	2.95	1.85	1.47	1.17	0.92
	40			6.25	3.93	2.47	1.96	1.56	1.23
	50				4.92	3.09	2.45	1.94	1.54
	60					3.71	2.94	2.33	1.85
125 FEET									
		12 AWG	10 AWG	8 AWG	6 AWG	4 AWG	3 AWG	2 AWG	1 AWG
AMPERES	20	9.88	6.21	3.91	2.46	1.55	1.23	0.97	0.77
	30		9.32	5.86	3.69	2.32	1.84	1.46	1.16
	40			7.81	4.92	3.09	2.45	1.94	1.54
	50				6.15	3.86	3.06	2.43	1.93
	60					4.64	3.68	2.92	2.31
150 FEET									
		12 AWG	10 AWG	8 AWG	6 AWG	4 AWG	3 AWG	2 AWG	1 AWG
AMPERES	20	11.85	7.46	4.69	2.95	1.85	1.47	1.17	0.92
	30		11.18	7.03	4.42	2.78	2.21	1.75	1.39
	40			9.38	5.90	3.71	2.94	2.33	1.85
	50				7.37	4.64	3.68	2.92	2.31
	60					5.56	4.41	3.50	2.77

Ex: A two-wire 20-ampere circuit using 12 AWG with a one-way distance of 25 feet will drop 1.98 volts; 120 volts - 1.98 volts = 118.02 volts as the load voltage.

OPERATING INSTRUCTIONS (Continued)

5. When assembling unit, make sure emergency stop button is pushed in. Hook up electrical supply. **Caution:** Operating unit with less than required voltage, more than required voltage, or inadequate generator size will result in damage to electrical components. This machine is marked on the Main Control Panel with the correct input voltage required. **Note:** Agitator motor and blower should only be operated with steady or constant flow of electricity between 110-120 volts. **Do not** operate machine with less than or more than required voltage. Damage to motors and other electrical parts will result, voiding warranty.
6. **Never** place machine where airflow may be blocked which will cause blower failure.

Follow instructions below for machines without remote (**SECTION A**) or with remote control (**SECTION B**).

7. This machine is equipped with an emergency stop button for your safety. This button must be pulled out and the start button must be pressed for the machine to start. (See Illustration A & Illustration A-1)

SECTION A (without remote control)

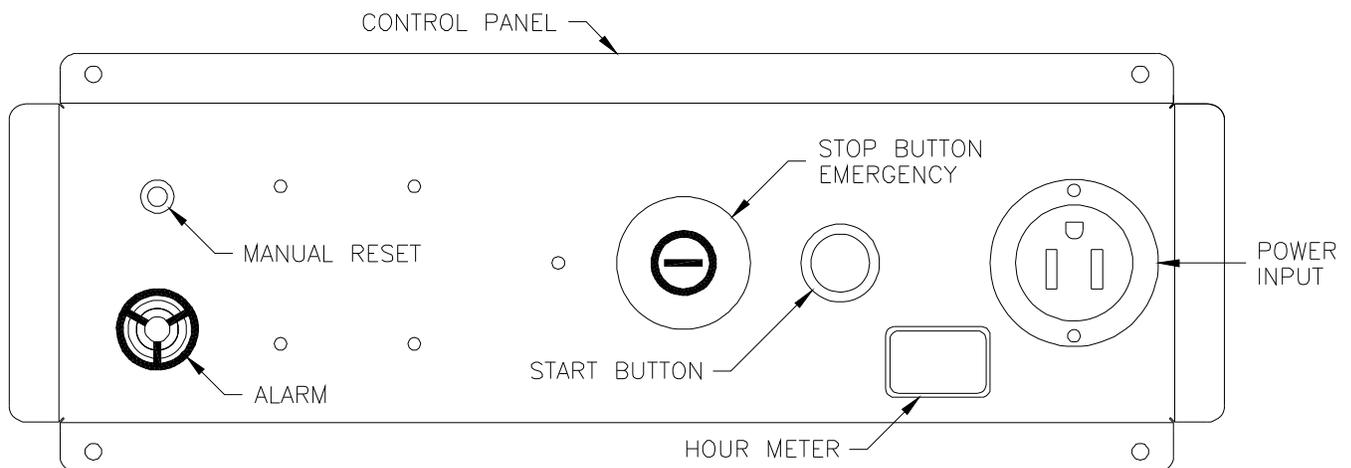


Illustration A

SECTION B (with remote control)

This unit has a main control panel that has a two position selector switch as follows. (**NOTE:** This main control panel will be referred to as the **CONTROL PANEL** and the toggle switch at the end of the remote cord as the **REMOTE CONTROL SWITCH**.) (See Illustration A-1)

LEFT POSITION **REMOTE**

Automatic side of switch which operates the **BLOWER MOTOR** on with **AGITATOR MOTOR** with the remote control switch.

RIGHT POSITION **MANUAL**

Manual side of switch which operates the **BLOWER MOTOR** on with **AGITATOR MOTOR** when the start button is pressed.

OPERATING INSTRUCTIONS (Continued)

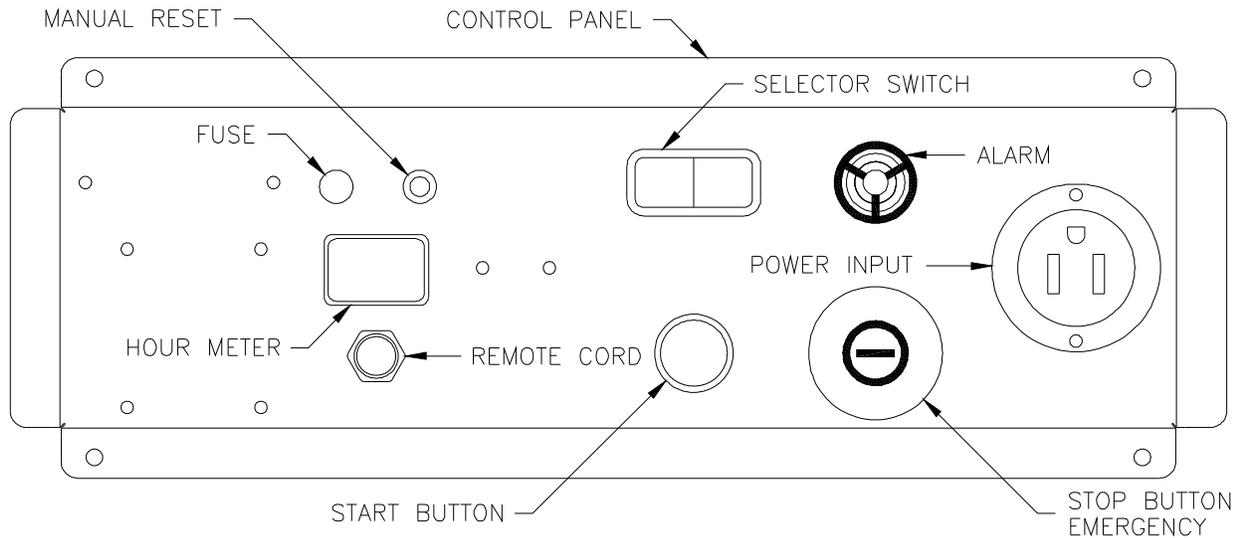


Illustration A-1

8. Fill hopper with insulation. The first bag of insulation in the hopper should be well broken by hand to assist agitator action. **Caution: NEVER** put hands below hopper bar or force-feed material by pushing down on insulation.
9. At the end of the workday, empty the hopper and use the machine to **BLOW OUT THE HOSE.**

TROUBLESHOOTING


IMPORTANT: DO NOT attempt to service unit. (Contact your dealer for further information.)

1. If machine does not run:
 - a. Make sure emergency stop button is pulled out and start button is pressed.
 - b. Check MOTOR RESET button. Press to reset.
 - c. Check power cord for proper connection.
2. Loud knocking sound: **(Unplug power supply)**
 - a. Check machine agitators and airlock for foreign objects.
 - b. Check for misaligned sprockets or loose chain.
3. Poor output from machine or uneven flow through hose: **(Unplug power supply)**
 - a. Check for material bridging in hopper.
 - b. Voltage may be low, try another electrical source. Use proper wire size for extension cord (#12-3).
 - c. Check for worn or damaged rubber airlock seals.
4. Blower motor running hot: **(Unplug power supply)**
 - a. Clean filter. Blow out surrounding area with air hose.
 - b. Check for restriction in blowing hose.
5. Agitator motor running hot: **(Unplug power supply)**
 - a. Check for insulation build up around motor and blow out with air hose.
 - b. Low voltage can cause this condition. Try another electrical source (#12-3).
 - c. Debris jamming airlock. Rotate airlock manually and clean out.
 - d. Check for sprocket misalignment and bearing wear.

ELECTRICAL


ELECTRICAL DIAGRAM: Periodically, disconnect machine from power source and check all electrical connections and components for broken or loose wires.

MODEL #325
120 V.A.C. — 60 Hz
SINGLE INPUT
W/REMOTE CONTROL

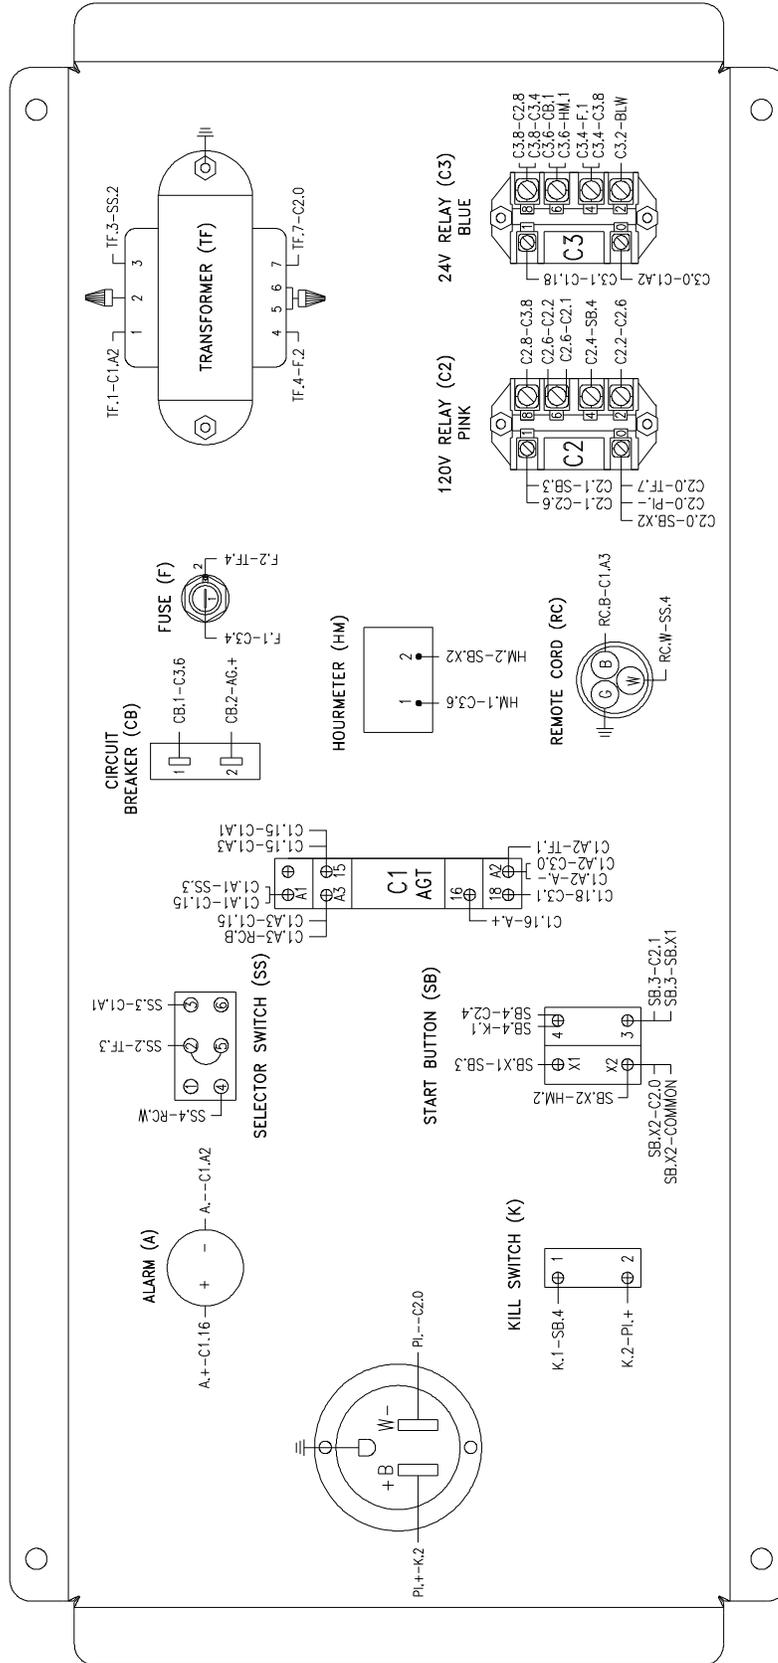


LADDER DIAGRAM

**MODEL #325
120 V.A.C. — 60 Hz
SINGLE INPUT**

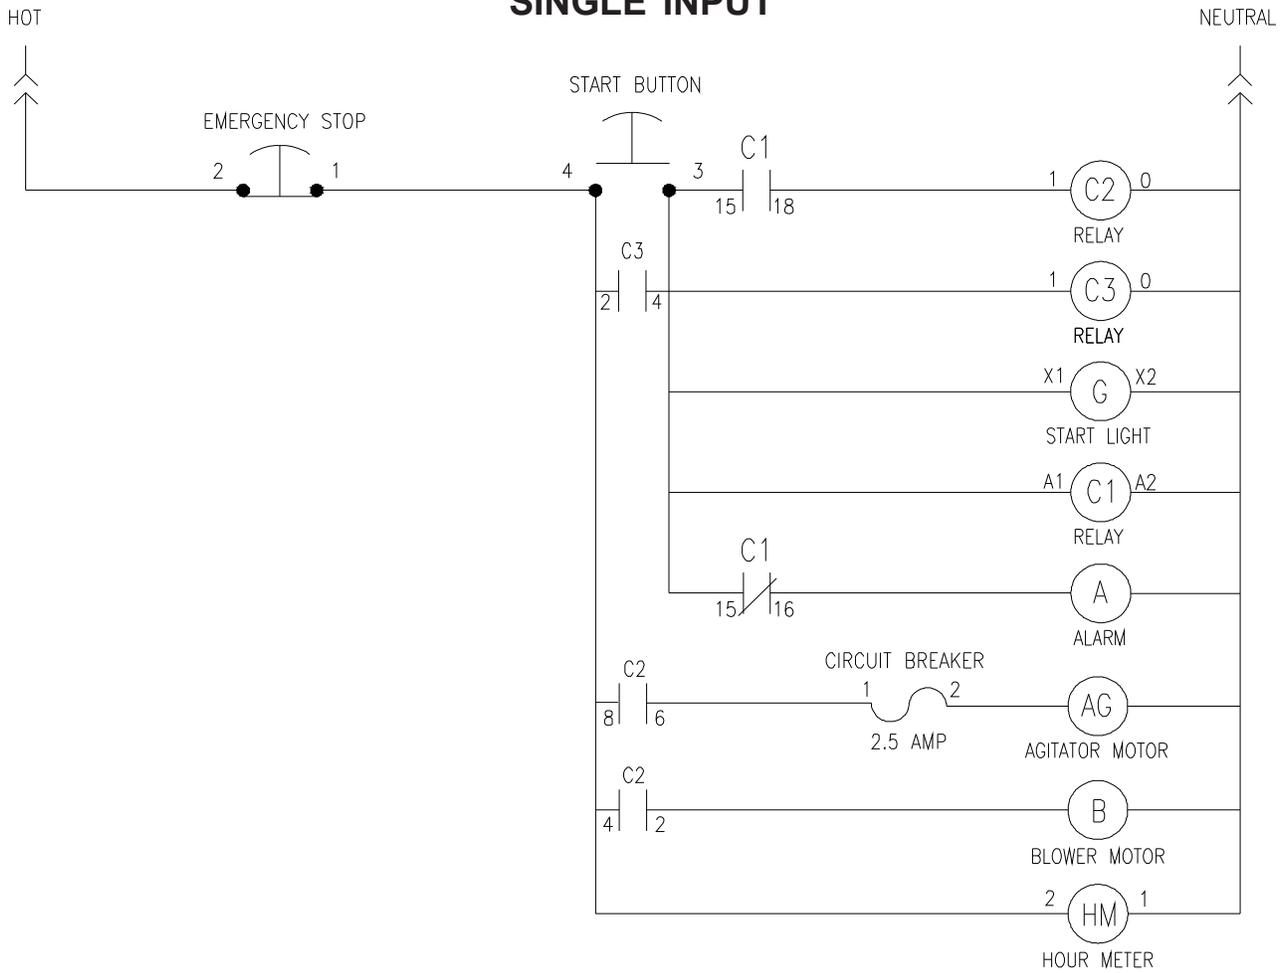

EXPLODED PARTS


#325 Machine

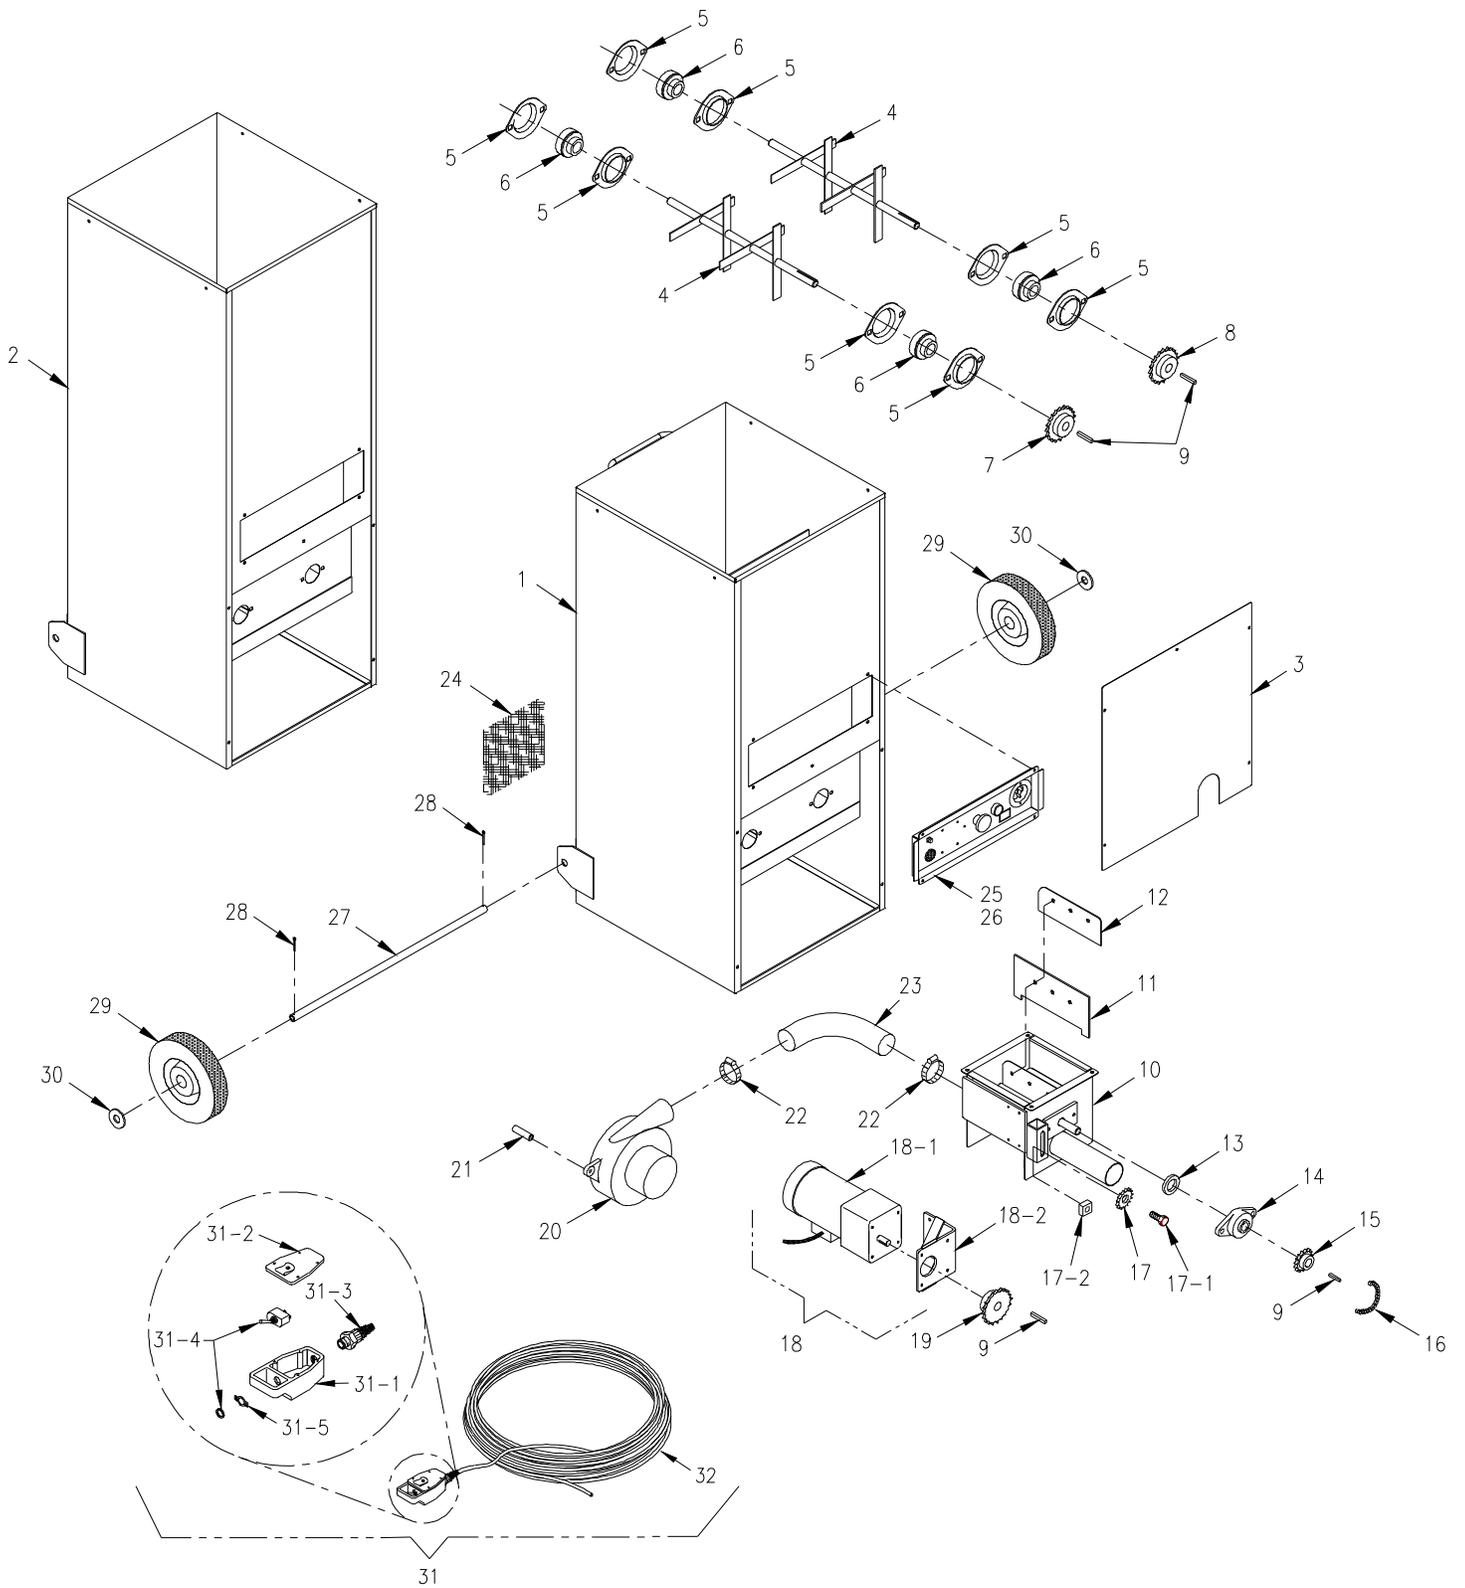

#325 PARTS LIST

Item #	Part #	Description
1	325-1-R4	Base and Hopper
2	325-1-R4E	Base and Hopper (Extended)
3	325-7-R1	Guard, Chain
4	325-2	Agitator (2)
5	1507	Housing, Flange, 3/4", 2-Bolt (8)
6	107-1	Bearing, 3/4", Insert Only (4)
7	4511	#40 Sprocket, 15T x 3/4"
8	4511-A	#40 Sprocket, 12T x 3/4"
9	448Z	Key, 3/16" x 3/16" x 1" (4)
10	325-3-R1	Airlock w/Rotor
11	426-3	Seal, Airlock, 2-Ply (5)
12	325-5	Cover Plate, Airlock (5)
13	426-7	Seal, Felt, 3/4" (2)
14	426-6	Bearing, 2-Bolt Flange, 3/4" Bore (2)
15	418	#40 Sprocket, 10T x 3/4"
16	40NP-43.75	#40 Chain, 43 3/4" Long
17	432	#40 Sprocket, Idler, 17T x 5/8"
17-1	FSB120	Shoulder Bolt, 5/8" x 3/4"
17-2	40052	Nut, 1/2-13 x 1" Square
18	325-21-ASSY	Motor Assy, 1/5HP, 120V
18-1	325-21	Gearmotor, 1/5HP, 120V
18-2	325-29	Motor Mount
19	325-28	#40 Sprocket, 18T x 5/8"
20	408-A	Blower Motor, 8A, 120V, 60Hz.
21	409-F	Spacer, Blower 2 1/16" (3)
22	337	Clamp, Hose, 2" (2)
23	407	Hose, 2" Dia., 12" Long
24	42562	Filter, 6 1/4" x 6 1/4"
25	325-27-R1	Panel, Electrical, Complete, 120V 60Hz
26	325-27-CA	Panel, Electrical, Complete, 120V 60Hz (Hardwired Remote)
27	325-8	Axle
28	FSB078	Pin, Cotter, 1/8" x 1" (2)
29	W-9	Wheel, 9" Pneumatic (2)
30	FW030	W 3/4" Flat Washer SAE (2)
---	199	Master Link, #40 (not shown)
31	RC395-A	RC cord assy, 100', SPST (Hardwired)
31-1	RC395-1	Switch Housing
31-2	RC395-2	Switch Back Plate
31-3	RC395-3	Strain Relief
31-4	1536-3	Switch, Toggle / SPST
31-5	1536-8	On/Off plate
31-6	RC395-4	8-16 Plastite Screw (4) (Not Shown)
32	18-3 SJ	Cord, #18-3 (SJ), 100 ft.


**ELECTRICAL PARTS LIST
120 V.A.C. 60 Hz. S.I.
W/O REMOTE CONTROL**

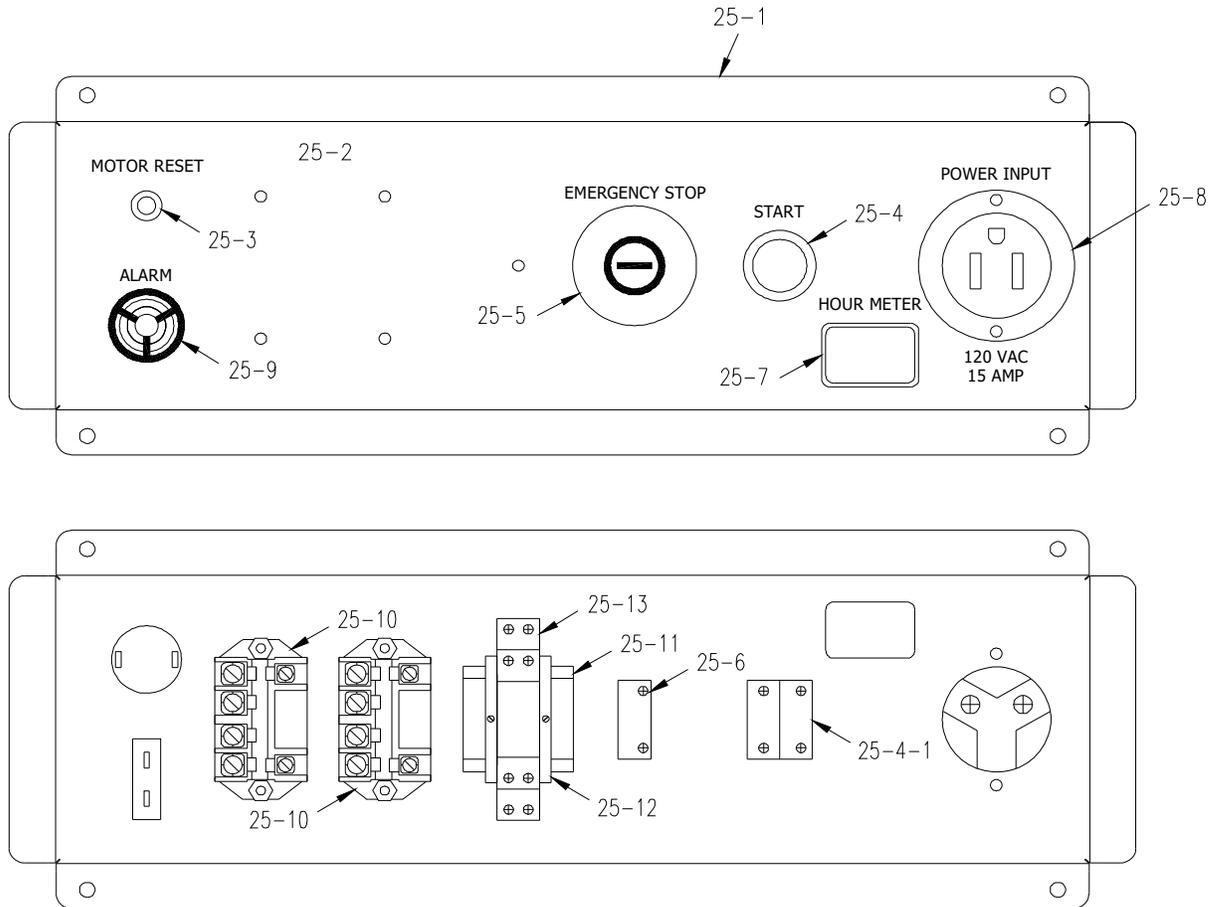

Electrical Exploded Parts List

Item#	Part#	Description
25-1	325-27-GF	Panel, Electrical
25-2	KMCS-221	Decal, 325 Electrical
25-3	433-A	Manual Reset, 2.5 Amp
25-4	543-M-14	Pushbutton On, Green
25-4-1	8075-2	Contact Block 22mm Green
25-5	508-2	Switch, Kill, Red
25-6	8075-1	Contact Block
25-7	543-M-77	Hour Meter
25-8	42528	Plug Recessed input 5-15P
25-9	550-5-4	Pre-Alarm System, 120V
25-10	ELU10-10	Relay, Contactor/Relay, 120V Control (2)
25-11	ELU07-G	Dinrail, 1 3/8", 1 7/16" Long
25-12	151080-49	Clamp, F/ 1 3/8" Dinrail (2)
25-13	RELAY-11	Timer / Relay SPST 12-24VAC 15A

ELECTRICAL PARTS LIST
120 V.A.C. 60 Hz. S.I.
W/REMOTE CONTROL

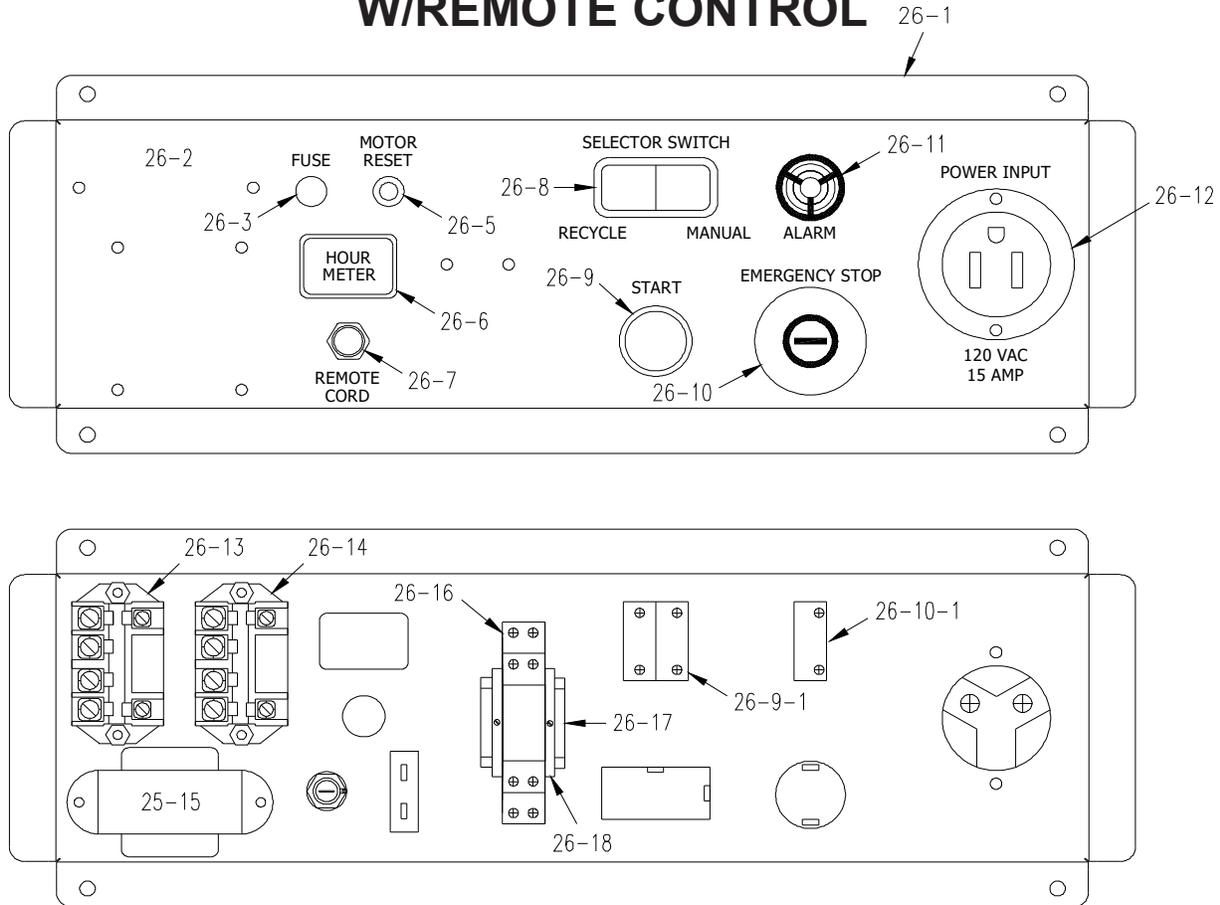

Electrical Exploded Parts List

Item#	Part#	Description
26-1	325-22-GF	Panel, Electrical
26-2	KMCF-221-R1	Decal, Electrical System
26-3	1532	Fuse Holder
26-4	1533-A	Fuse, 1/2 Amp, Glass
26-5	433-A	Manual Reset, 2.5 Amp
26-6	543-M-77	Hour Meter
26-7	1536-4	Cord Restraint, 3/8"
26-8	325-11	Switch, Rocker, DPDT
26-9	543-M-14	Pushbutton On, Green
26-9-1	8075-2	Contact Block 22mm Green
26-10	508-2	Switch, Kill, Red
26-10-1	8075-1	Contact Block
26-11	543-M-38	Pre-Alarm System
26-12	42528	Plug Recessed input 5-15P
26-13	ELU10-11	Contactor / Relay, 24V Control
26-14	ELU10-10	Contactor / Relay, 120V Control
26-15	1530-C	Transformer, 1 Amp
26-16	RELAY-11	Timer / Relay SPST 12-24VAC 15A
26-17	ELU07-G	Dinrail, 1 3/8", 1 7/16" Long
26-18	151080-49	Clamp, F/ 1 3/8" Dinrail (2)

GLOSSARY

BRIDGING	Tendency of insulation to cling in the hopper forming an air pocket above the airlock. This hinders the normal feeding process of the machine.
CFM	(Cubic feet per minute). A measurement of volume or quantity of air flowing at a certain rate, or air moving capability, of a blower. It is the volume of air moved per minute. Higher volume provides increased coverage and velocity of insulation as it leaves the hose.
COVERAGE	Refers to the amount of insulation coverage, usually measured in square feet, according to the R-value desired. This information is given on the insulation package.
PSI	(Pounds of pressure per square inch). The force exerted on a surface by air/liquid. High-pressure blowers push the insulation through the hose. Higher pressure provides less hose plugging and increased compaction in side wall.
PRODUCTION RATE	Pounds of insulation blown per hour.
RPM	(Revolutions per minute). Speed at which the shaft of a rotating device (i.e. blower fan, agitator) is moving.
R-VALUE	Resistance value. A precise measurement of the insulation's resistance to heat transfer. The higher the resistance value, the slower the heat will transfer through the insulating material.
SETTLED DENSITY	The point at which the insulation will not continue to settle further. Any insulation blown will have a certain amount of progressive settling that occurs after a period of time. Following the insulation manufacturers recommendations for bag rate coverage will provide useful information to accommodate for settling.
SETTLING	Compression or compaction of insulation fibers caused by the weight of the material, vibration of structure, temperature, and humidity cycles.

SERVICE RECORD

DATE	MAINTENANCE PERFORMED	COMPONENTS REQUIRED



65 YEARS OF QUALITY AND SERVICE

Made in the U.S.A.

**KRENDL MACHINE COMPANY • 1201 SPENCERVILLE RD
DELPHOS, OHIO 45833 • TELEPHONE 800-459-2069 • FAX 419-695-9301
E - MAIL: krendl@krendlmachine.com • WEB SITE: www.krendlmachine.com**
